AUTOMATIONDIRECT.com
3505 HUTCHINSON ROAD
CUMMING, GA 30040-5860, USA

STRIDE™ INDUSTRIAL UNMANAGED ETHERNET SWITCH 5-PORT – DATA SHEET

SE-SW5U

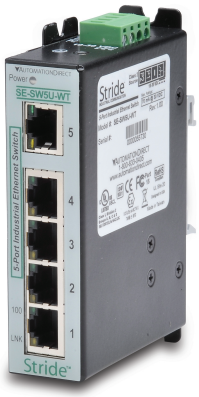

SE-SW5U-WT

Metal case designed for -40 ° to 85 °C.

NOTE: FOR ADDITONAL PRODUCT DETAILS, A USER MANUAL, SE-USER-M, IS AVAILABLE AS A DOWNLAODABLE PDF FILE FROM THE ONLINE DOCUMENTATION AREA OF THE AUTOMATIONDIRECT WEBSITE.

Description:

STRIDE SlimLine Industrial Unmanaged Ethernet Switch with five 10/100BaseT RJ45 Ethernet ports. Redundant power inputs with surge and spike protection. Auto-crossover. DIN rail mounting. Supports store & forward wire speed switching and full-duplex with flow control. UL, CSA (CUL), & CE. The -WT models have a metal case and are rated for a wider temperature range, from -40 ° to 85 °C.

NOTE: DIMENSIONS, INSTALLATION AND WIRING INFORMATION IS SHOWN ON THE BACK OF THIS DATA SHEET.

Copper RJ45 Ports: (10/100BaseT)	
10/100BaseT ports	Shielded RJ45
Protocols supported	All standard IEEE 802.3
Ethernet compliancy	IEEE 802.3, 802.3u, 802.3x
Auto-crossover	Yes, allows you to use straight-through or crossover wired cables
Auto-sensing operation	Yes, Full and half duplex
Auto-negotiating	Yes, 10BaseT and 100BaseT
Auto-polarity	Yes, on the TD and RD pair
Flow control	Automatic
Ethernet isolation	1500 VRMS 1 minute
Plug and play	Yes
Cable requirements	Twisted pair (Cat. 5 or better) (shielded recommended)
Max. cable distance	100 meters

General Specifications		
Ethernet switch type	5 ports	
Operating mode	Store and forward wire speed switching, non-blocking	
Devices supported	All IEEE 802.3 compliant devices are supported	
Standards	IEEE 802.3, 802.3u, 802.3x	
MAC addresses	1024 addresses	
Memory bandwidth	3.2 Gbps	
Latency for 10 Mbps ports	16 us + frame time (typical)	
Latency for 100 Mbps ports	5 us + frame time (typical)	
Power input	Redundant Input Terminals	
Input power (typical with all ports active at 100 Mbps)	2.0 W	
Input voltage	10-30 VDC (continuous) - Class 2 Power Supply	
Reverse power protection	Yes	
Transient protection	15,000 watts peak	
Spike protection	5,000 watts (10x for 10 uS)	
Ethernet isolation	1500 VRMS 1 minute	
Operating temperature range	SE-SW5U	-10 to +60 °C (+14 to +140 °F), cold startup at -10 °C (+14 °F)
	SE-SW5U-WT	-40 to +85 °C (-40 to +185 °F), cold startup at -40 °C (-40 °F)
Storage temperature range	-40 to +85 °C (-40 to +185 °F)	
Humidity (non-condensing)	5 to 95% RH	
Environmental Air	No corrosive gasses permitted	
Vibration, shock & freefall	IEC68-2-6, -27, -32	
Electrical safety	UL508/CSA C22, EN61010-1 (file #E200031)	
EMI emissions	FCC part 15, ICES-003, EN55022	
EMC immunity	IEC61326-1	
Agency Approvals	UL/cUL 508, CSA C22 per EN61010-1, UL/cUL 1604 (Class 1, Div. 2, Groups A, B, C, D), CSA C 22.2/213 9 per EN50021/EN60079-15 (Zone 2, Category 3), CE (ATEX)	
RoHS and WEEE	RoHS (Pb free) and WEEE compliant	
Packaging and protection	SE-SW5U	UL94VO Lexan, IP30
	SE-SW5U-WT	Aluminum IP30
Dimensions (L x W x H)	See mechanical diagrams for details	
Weight	SE-SW5U	4 oz (0.11 kg)
	SE-SW5U-WT	6 oz (0.17 kg)

Safety Standards:

Electrical Safety

European Directives

US Emissions

WEEE Compliant

RoHS Compliant

1-800-633-0405
www.AutomationDirect.com

Dimensions:

5 Port – SE-SW5U

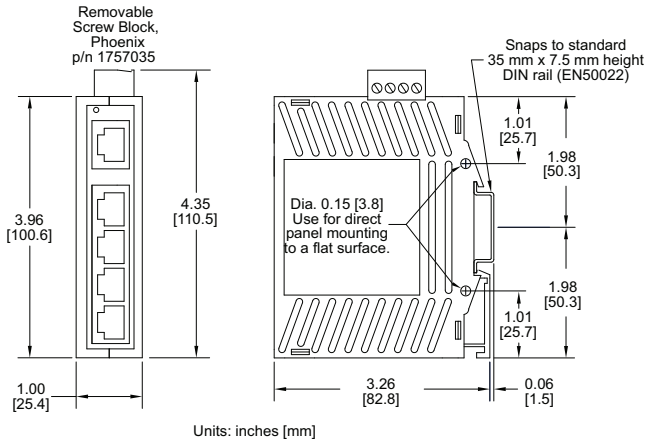

Units: inches [mm]

5 Port – SE-SW5U-WT

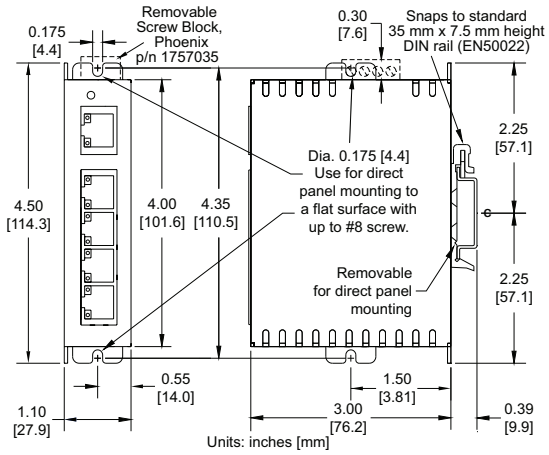

Units: inches [mm]

Installation – DIN Rail Mounting:

The switch can be snapped onto a standard 35 mm x 7.5 mm height DIN rail (Standard: CENELEC EN50022) and can be mounted either vertically or horizontally.

DIN rail mounting steps, plastic and metal case:

1. Hook top back of unit over the DIN rail.
2. Push bottom back onto the DIN rail until it snaps into place.

DIN rail removal steps, plastic case:

A. Insert screwdriver into DIN clip and pry until it releases from the rail.
B. Unhook top of unit from DIN rail.

DIN rail removal steps, metal case:

A. Push the unit down to free the bottom of the DIN rail.
B. Rotate the bottom of the unit away from the DIN rail.
C. Unhook top of unit from DIN rail.

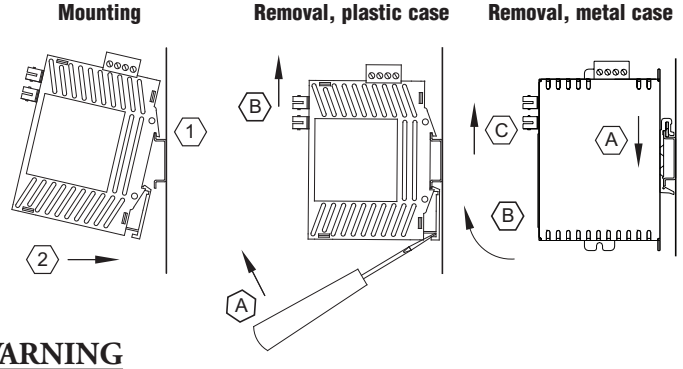

WARNING

All power, input and output (I/O) wiring must be in accordance with Class I, Division 2 wiring methods and in accordance with the authority having jurisdiction.
"This Equipment is Suitable for Use in Class I, Division 2, Groups A, B, C, D or Non-Hazardous Locations Only".

WARNING – EXPLOSION HAZARD – SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.

WARNING – EXPLOSION HAZARD – WHEN IN HAZARDOUS LOCATIONS, DISCONNECT POWER BEFORE REPLACING OR WIRING UNITS.

WARNING – EXPLOSION HAZARD – DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NONHAZARDOUS.

WARNING – EXPLOSION HAZARD – IN HAZARDOUS OR POTENTIALLY HAZARDOUS LOCATIONS, DO NOT SEPARATE ANY PART OF THE UNIT WHEN ENERGIZED. USE THE UNIT FOR INTERNAL CONNECTIONS ONLY.

Tout pouvoir, le câblage d'entrée et de sortie (I/O) doivent être conformes aux méthodes de câblage de Classe I, Division 2 et conformément à l'autorité compétente.
"Cet équipement est adapté pour une utilisation en Classe1, Division 2, Groupes A, B, C et D ou endroits non-dangereux seulement ".

AVERTISSEMENT – RISQUE D'EXPLOSION – LA SUBSTITUTION DE TOUT COMPOSANT PEUT NUIRE À LA CONFORMITÉ DE CLASSE I, DIVISION 2.

AVERTISSEMENT – RISQUE D'EXPLOSION – LORSQUE DANS DES ENDROITS DANGEREUX, DÉBRANCHEZ LE CORDON D'ALIMENTATION AVANT DE REMPLACER OU DE BRANCHER LES MODULES.

AVERTISSEMENT – RISQUE D'AVERTISSEMENT – NE DÉBRANCHEZ PAS L'ÉQUIPEMENT PENDANT QUE LE CIRCUIT EST DIRECT OU À MOINS QUE L'ENVIRONNEMENT SOIT CONNU POUR ÊTRE LIBRE DE CONCENTRATIONS INFLAMMABLES.

AVERTISSEMENT – RISQUE D'EXPLOSION – DANS LES ENDROITS DANGEREUX OU POTENTIELLEMENT DANGEREUX, NE PAS SEPARER UNE PARTIE DE L'UNITE SOUS TENSION. SEULEMENT UTILISEZ L'APPAREIL POUR LES CONNEXIONS INTERNES.

Copyright 2014, *AutomationDirect.com* Incorporated/All Rights Reserved Worldwide

Power Wiring:

The switch can be powered from the same DC source that is used to power your other devices. To maintain the UL508 listing, this must be a Class 2 power supply. A DC voltage in the range of 10 to 30 VDC needs to be applied between the P1 (plus) terminal and the Minus terminal as shown below. The chassis screw terminal should be tied to panel or chassis ground. To reduce down time resulting from power loss, the switch can be powered redundantly with a second power supply as shown below.

A recommended DC power supply is **AutomationDirect.com** Part number PSC-24-015.

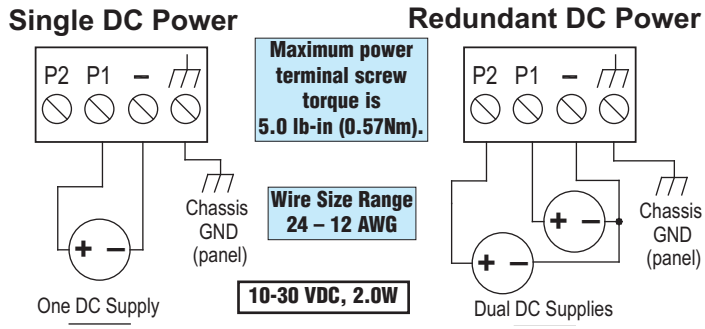

Communication Ports Wiring:

The switch provides connections to standard Ethernet devices such as PLCs, Ethernet I/O, industrial computers and much more. Use data-quality (not voice-quality) twisted pair cable rated category 5 (or better) with standard RJ45 connectors. Straight-through or crossover RJ45 cable can be used for all devices the switch is connected to as all the ports are capable of auto-mdi/mdix-crossover detection.

The RJ45 Ethernet port connector bodies on the switch are metallic and connected to the Chassis GND terminal. Therefore, shielded cables may be used to provide further protection. To prevent ground loops, the cable shield should be tied to the metal connector body at one end of the cable only. Electrical isolation is also provided on the Ethernet ports for increased reliability.

Additional Help and Support

- For additional product support, specifications, and installation, a User Manual, SE-USER-M, is available as a downloadable PDF file from the Online Documentation area of ***www.AutomationDirect.com***
- For additional technical support and questions, call our Technical Support team @ 770-844-4200.

1-800-633-0405
www.AutomationDirect.com